

WLS Update procedure



WLS – Firmware update procedure

0 Switch OFF your FALCON




1 Connect WLS to the PC, WLS is ON



20s

2 Copy the WLS_update.czip on WLS in the update folder

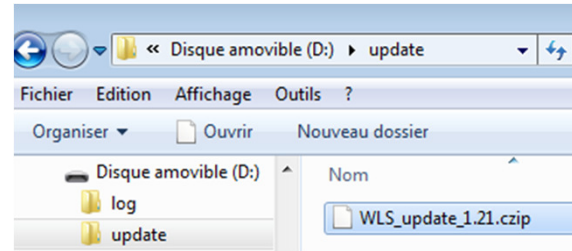


3 Switch OFF WLS



4 Switch ON WLS



2 min

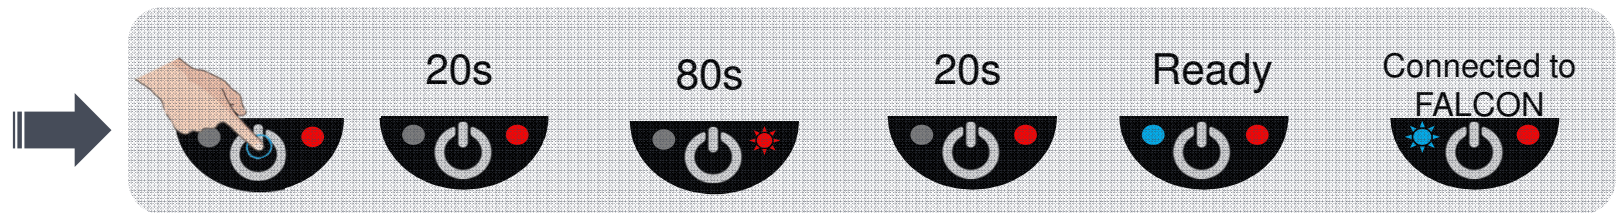

How to check WLS firmware version



- To check the correct update, go into the FALCON Settings > Wireless sensor

- Click on the Test button to read the WLS firmware version